


Summary Tab Overview

The Summary Tab configuration was created to allow Zedi Access users easy access to a locations data that matter most to them within a grid view. Once the Summary Tab has been selected, a user is able to see the sites in an order that makes sense to them and they are able to easily see all their locations, on one screen without having to move to a new Well Site Display (Locations tab) or scroll up and down. The Summary Tab will also highlight any locations that have a current alarm, no communication and if any alarm parameters have been enabled by a per sensor basis.

SUMMARY TAB

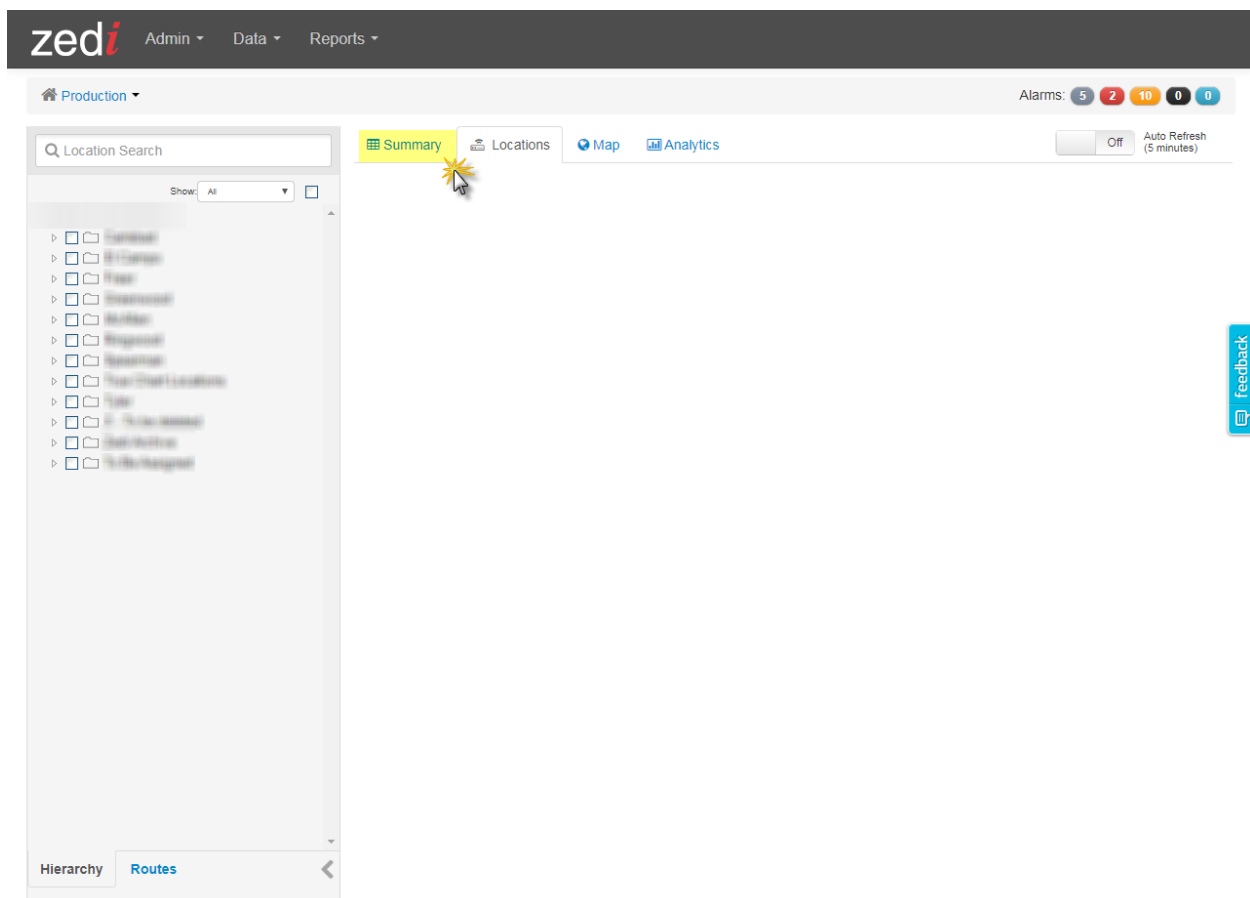




Zedi Cloud SCADA Solutions



Summary Locations Map Analytics

Off Auto Refresh (5 minutes) Refresh


Wells

	Location	Last Transmitted	Gas Flow Rate (M...	Static Pressure (psi)	Differential Press.
	HACKBERRY HILLS	2019-03-13 12:28:20 (CDT)	0	230.05	0
	Shoe Bar Ranch U-3 #1	2020-03-06 14:20:39 (CST)	0	17.94	0
	Federal #6-1	2020-03-06 14:20:39 (CST)	0	28.96	-0

feedback


 
 
 
 
- a. The  icon is additional location details.

Location	Last Transmitted
HACKBERRY HILLS	2019-03-13 12:28:20 (CDT)
UWI: 8960	
Device Type: Zedi SCADA (Offline)	
Serial Number: VER006FB107HACKBERRYHILLS	
IP Address: 10.104.9.23	

- b. The  icon is the same as the options menu on the Well Site Display (Locations tab). From this icon, you can access Live Data and see custom reports and graphs.

Summary Locations Map Analytics

Test Category Wells

Location	Last Transmitted
	2020-01-25 17:20:53 (CST)
	2020-01-25 17:20:52 (CST)
	2019-03-13 12:28:20 (CDT)
	2020-01-09 09:15:18 (CST)
	2020-01-25 17:20:53 (CST)

Configure Alarm
Configure Location
Data Entry
Event Log
Live Data
Location Properties
Meter Reports
QTRs
Edit Location

Alarms

Summary Locations Map Analytics

Off Auto Refresh (5 minutes) Refresh

Wells

	Location	Last Transmitted	Gas Flow Rate (M...	Static Pressure (psi)	Differential Press...
≡ ⓘ	Barnett 23-B-1	2020-03-09 16:26:04 (CDT)	0	-0.11	-0.00
≡ ⓘ	Fruit Branch 28	2019-11-06 11:26:11 (CST)	0	2.02	-0.00
≡ ⓘ	Wells 28B	2020-03-09 16:26:03 (CDT)	0	99.11	-0.00
≡ ⓘ	Wells 28B-1	2020-03-09 16:27:18 (CDT)	0	238.94	-0.00
≡ ⓘ	Wells 28B-2	2020-03-09 16:26:03 (CDT)	0	888.86	-0.20

- c. Color shaded cells represent **Alarms**

Grey background on location field —No Comms Alarm

Location

Orange/Yellow cells —High/Low alarms

0

Red cells —High High and Low Low alarms, or Smart-Alek cry out alarms

0

Data

Summary Locations Map Analytics

Off Auto Refresh (5 minutes) Refresh

Wells

	Location	Last Transmitted	Gas Flow Rate (M...	Static Pressure (psi)	Differential Press...
≡ ⓘ	Barnett 23-B-1	2020-03-09 16:26:04 (CDT)	0	-0.11	-0.00
≡ ⓘ	Fruit Branch 28	2019-11-06 11:26:11 (CST)	0	2.02	-0.00
≡ ⓘ	Wells 28B	2020-03-09 16:26:03 (CDT)	0	99.11	-0.00
≡ ⓘ	Wells 28B-1	2020-03-09 16:27:18 (CDT)	0	238.94	-0.00
≡ ⓘ	Wells 28B-2	2020-03-09 16:26:03 (CDT)	0	888.86	-0.20


- d. Black Font: Live Data 520.28

Green Font: Alarm set points have been “enabled” for this sensor 145.56


Grey Font: Stale Data, has not transmitted in the last 24 hours 89.2

SUMMARY CONFIGURATION



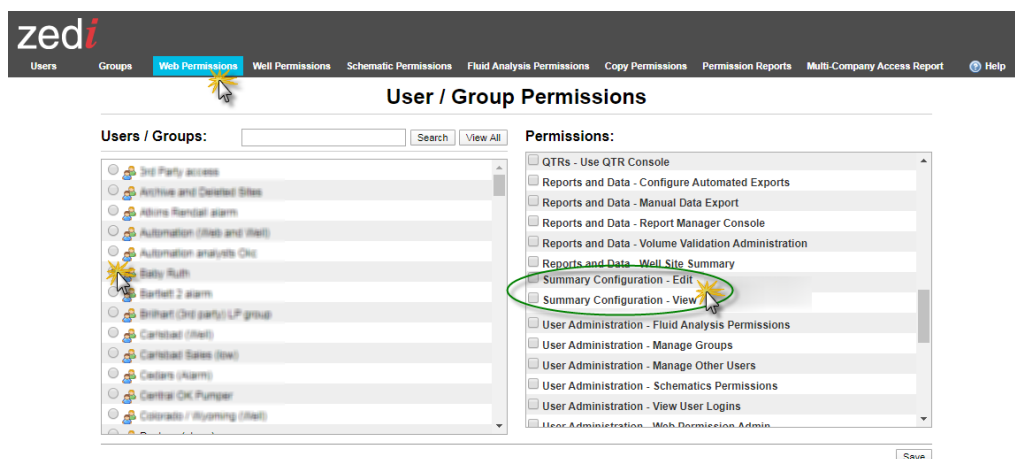

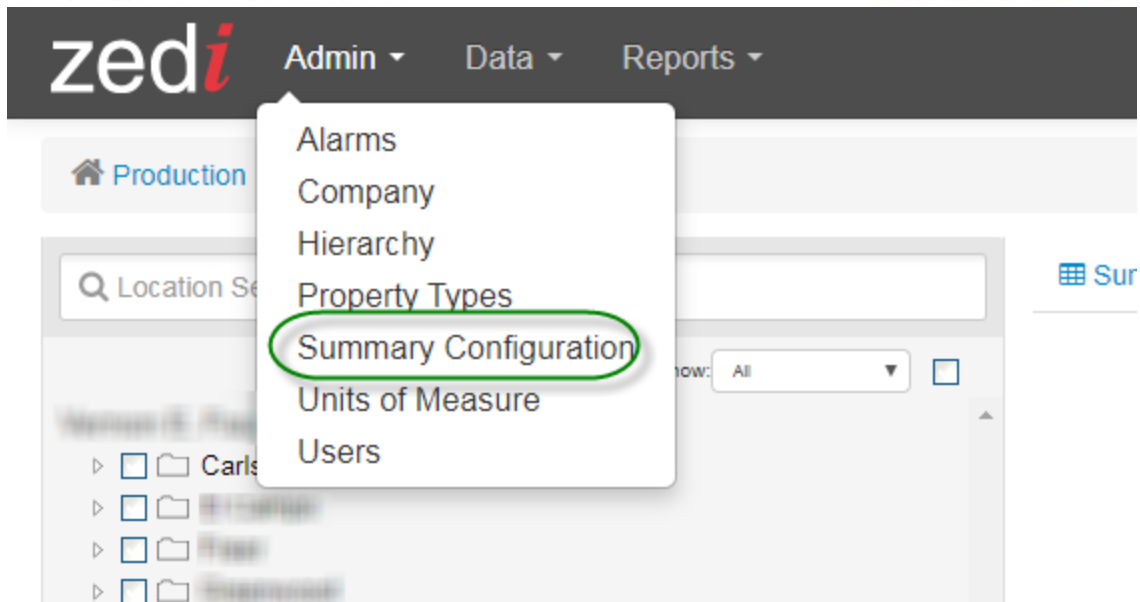


 
 



1. For users have access to the Summary Configuration they need to have 2 Web Permissions assigned. In the Admin drop down menu, under users, and in web permissions, select **Summary Configuration – Edit and Summary Configuration – View**. Users who do not have this selected will not be able to see the Summary Configuration tab under the Admin Menu.



2. Once the user with both permissions logs in they can see the Summary Configuration in the Admin dropdown.



3. The user is now able to do the following:
 - a. User can see the list of all existing location categories in the company (both company specific and system)
 - b. User can only View a system location category. They cannot edit or delete it.
 - c. User can Add, Edit or Delete a company specific location category.
 - d. User can bulk assign or unassign locations from any location category (except Not Assigned – this one is for automatically catching any locations that are not assigned to any location categories yet).
 - e. User can also see the list of locations assigned to a location category by clicking on the number link under Locations Assigned column.

Home / Summary Configuration			
Add +			
Type	Location Category Name	Configure	Locations Assigned
	Test Category	  	16 Locations
	Not Assigned		0 Locations
	SilverJacks	 	6 Locations
	Wells	 	658 Locations

4. When the user clicks on the Bulk Assign/Unassign button, a Bulk Assign/Unassign page opens. This is where user needs to select a Run/Route and click on the Assign or Unassign button depending on what they are intending to do.

Home / Summary Configuration

Add +

Type	Location Category Name	Locations Assigned
	Test Category	16 Locations
	Not Assigned	0 Locations
	SilverJacks	6 Locations
	Wells	658 Locations

Edit (pencil icon) | Configure (gear icon) | Delete (X icon) | View (eye icon) | Bulk assign/unassign (plus/minus icon)

Bulk Assign/Unassign

Location Category: Test Category

Routes

Test Route

- Once the locations have been assigned to a location category, those locations are selected in tree (either through Hierarchy tab or Run/Routes tab), locations will show up under the location categories that they are part of (under Summary tab)

Production

Routes New Route +

Test Route

Summary | Locations | Map | Analytics

Test Category | Wells

	Location	Last Transmitted	Avg Temperature (...)	Static Pressure (psi)	Differential Press...	Flowing Temperat...
	C	2020-01-25 17:20:53 (CST)	-	675.89	1050.62	72.25
	F	2020-01-25 17:20:52 (CST)	-	40.043	-0.076	81.3
	HACKBERRY HILLS	2019-03-13 12:28:20 (CDT)	-	230.047	0.025	58.72
	P	2020-01-09 09:15:18 (CST)	57.23	124.695	0	48.36
	S	2020-01-25 17:20:53 (CST)	-	18.501	0.093	71.21

- Once the locations have been assigned to a location category, those locations are selected in hierarchy (either through Hierarchy tab or Run/Routes tab), locations will show up under the Location Categories that they are a member of (under Summary tab).

Should you have any questions regarding this latest update, please feel free to contact our Customer Care team 1-866-732-6967 or zedi.support@emerson.com